



5087S
RGB

用户手册
User Manual

目录

5087S RGB规格参数	1
5087S RGB组合键功能	2
5087S RGB系统功能(Windows)	3
5087S RGB系统功能(Mac)	4
5087S RGB背光调节	5
Akko Macro V1.0宏定义功能说明1	6
Akko Macro V1.0宏定义功能说明2	7
Akko Macro V1.0宏定义功能说明3	8
Akko Macro V1.0宏定义的调用	9
Akko售后服务规范	10

Menu

5087S RGB Technical Specifications	11
5087S RGB HotKeys	12
5087S RGB System Commands (Windows)	13
5087S RGB System Commands (Mac)	14
5087S RGB Backlight Settings	15
Akko Macro V1.0 Macro Setup Instruction 1	16
Akko Macro V1.0 Macro Setup Instruction 2	17
Akko Macro V1.0 Macro Setup Instruction 3	18
Akko Macro V1.0 Calling Macros	19
Akko Warranty and Service Statement	20

5087S RGB规格参数

1

尺寸

约360*132*40mm

重量

约0.9KG

产地

中国

类型

机械键盘

键帽

PBT材质

连接线

Type-C To USB

多媒体键

支持

 
全键无冲

支持

自定义按键

支持,使用Akko Marco V1.0免驱宏录制系统。

5087S RGB组合键功能

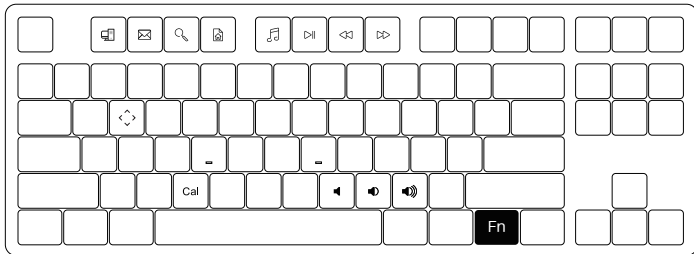


Fn+	F1	=	我的电脑
	F2		电子邮件
	F3		Windows搜索
	F4		浏览器主页
	F5		多媒体播放器

Fn+	F6	=	播放/暂停
	F7		上一首
	F8		下一首
	C		计算器
M	静音		

Fn+	<	=	音量减小
	>		音量增加
	W		将W A S D 与↑↓←→键 对调

5087S RGB系统功能(Windows)

 3

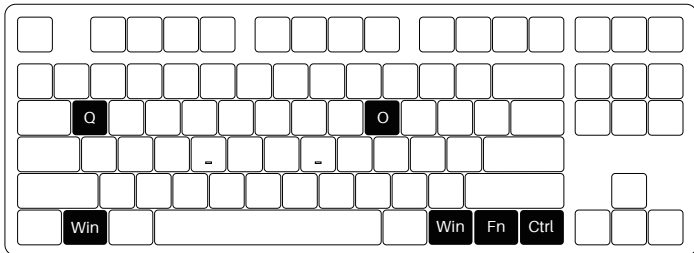

锁Win键

Fn + 左Win

恢复出厂设置

长按 左Win + 右Win 5秒

将Ctrl变成Menu (App) 键

长按Fn + 右Ctrl 3秒

 
进入Windows系统

长按Fn + Q 3秒

进入Mac系统

长按Fn + O 3秒

5087S RGB系统功能(Mac)

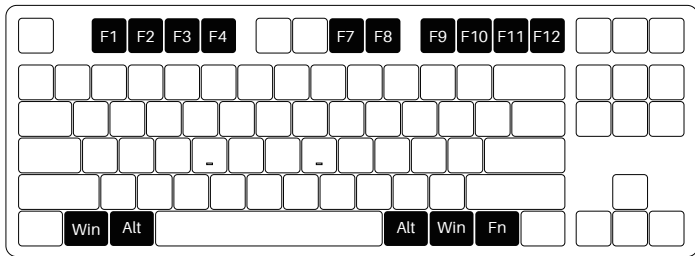

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 向后跳(音频)

F8 暂停/播放(音频)

F9 向前跳过(音频)

F10 静音

F11 调低音量

F12 调高音量

左Win Option

左Alt Command

 
右Alt Command

右Win Option

Fn + (F1 ~ F12)

F1 ~ F12

5087S RGB灯光背光功能

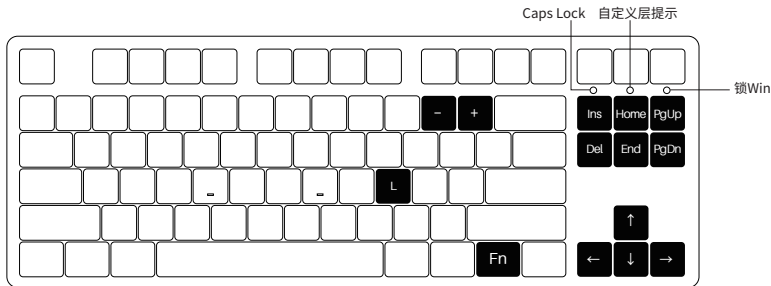


Fn+	Ins	呼吸灯 1 / 常亮 1 / 单色渐变
	Home	涟漪 1 / 单点亮 1 / 极光 1
	PgUp	曲线波浪 1 / 爆炸波浪 1 / 微波凌凌 1
	Del =	左右波浪 1 2 / 风车波浪 1 2 / 逐列渐变 1 2
	End	繁星闪烁 / 雨滴 1 / 上下波浪 2
	PgDn	左右涟漪 1 / APM颜色变换 1 / 彩虹扩散 2
	L	背光开关

Fn+	“↑”	灯光变亮
	“↓”	灯光变暗
	“←”	灯光方向改变 2
	“→”	灯光色彩改变 1
	“-”	灯光速度变慢
	“+”	灯光速度变快

■ Akko Macro V1.0宏定义功能说明 1

1. 自定义功能无需驱动程序, 根据说明操作可直接使用。
2. “Esc”, “Fn”, “左Win键”, “右Win键”四颗功能键无法自定义。
3. 目前Akko Macro V1.0不支持同时触发, 即“AB”同时按下依然以A, B顺序触发。
4. 目前Akko Macro V1.0不支持自定义间隔时间, 即无法定义A, B之间的间隔, 不论你按的快或者慢, 都会以系统默认的触发时间定义。

 Akko Macro V1.0宏定义功能说明 2

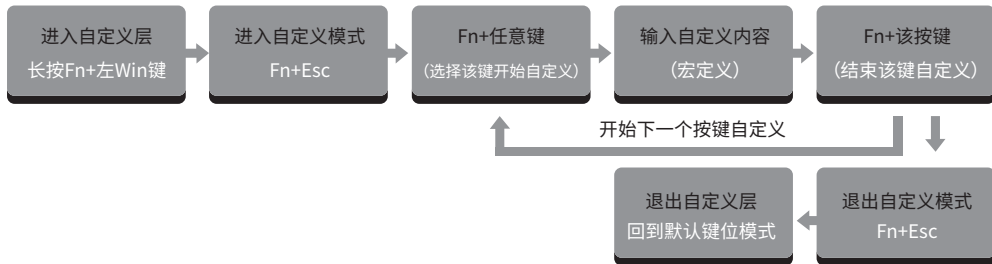

清除宏：

如果该按键已经进行了自定义,当进入自定义模式后,按下FN+该按键则会清除该按键的宏。
如果要对该按键重新进行自定义,则在清除宏后再按照正常步骤按下FN+该键,开始自定义。

Akko Macro V1.0宏定义功能说明 3

宏定义示例:将A定义成 akkogear

第一步:长按Fn+左Win 3秒,进入自定义层

第二步:按Fn+Esc,开始宏定义

第三步:按Fn+A,选择A开始宏定义

第四步:按照顺序按下a,k,k,o,g,e,a,r

第五步:按Fn+A,结束A的宏定义

此时,按A就会显示akkogear,如果您还要对B进行宏定义,按下Fn+B,开始B的宏定义

第六步:按Fn+Esc退出宏定义

在自定义层下,就可以操作您设置的键位和宏了

第七步:长按Fn+左Win 3秒,退出自定义层,回到默认键位

方法一：

进入自定义层(长按Fn+左Win),进入自定义层之后,所有按键变成已经自定义的内容,同时Win被锁,如果想使用Win,按下Fn+Win解锁。在这个模式下,您可以任意的使用已经编辑好的按键。自定义层不被记录,关机或者插拔后需要会恢复到默认键位,需要重新操作后进入自定义层。

方法二：

在默认键位下,通过Fn+右Alt+已经定义的按键,快速调用该按键的自定义内容,注意一定要按照先按Fn再按Alt的顺序调用。

1. Akko机械键盘享受非人为损坏1年保修服务, 即从购买日起, 1年以内免费维修。
2. 如超过条款1的保修期限, Akko官方将收取不超过市场平均价格的费用提供维修服务。
3. 用户自行拆开键盘视为放弃免费维修服务, 即使1年内损坏, 也按照售后服务条款2执行。
4. 不同销售平台的特殊服务条款, 以购买平台规则为准。

注意 人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等, 键盘为电子产品, 请按照电子产品
事项 保护方式爱惜使用。

售后电话:0755-27728007

售后QQ:981572876

*官方售后服务时间为每周一至周五上午10:00至下午18:00, 节假日以国家法定节日休息为准。

*因受维修时间, 物流时间, 零件采购时间等不可控因素, 售后时间会有不同, 以实际损坏情况评估为准, 请用户耐心等待。

5087S RGB Technical Specifications

11

Dimensions

Approximately
360*132*40mm

Weight

Approximately
0.9KG

Country of Origin

China

Type

Mechanical Keyboard

Keycap

PBT Material

Interface

Type-C To USB

Multimedia Keys

YES

 
N-Key Rollover

YES

Custom Keys

YES (use Akko Marco V1.0)

5087S RGB HotKeys

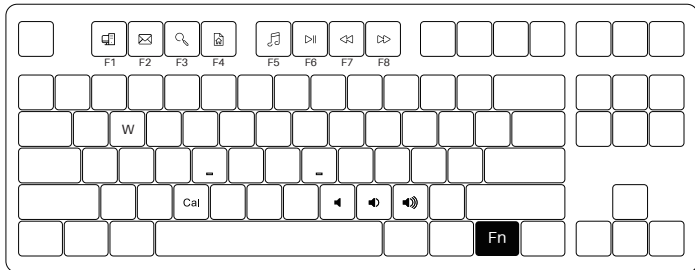

*The key combinations below are applicable to Windows system. The combination might change with respect to different Windows systems or along with system updates. Please follow Akko website for the latest hotkeys.


Fn+	F1	=	File Explorer
	F2		E-mail
	F3		Windows Search
	F4		Browser Homepage
	F5		Media

Fn+	F6	=	Pause/Playback
	F7		Previous Song
	F8		Next Song
	C		Calculator
	M		Mute

Fn+	<	=	Decrease Volume
	>		Increase Volume
	W		Swap W A S D with ↑ ↓ ← →

5087S RGB System Commands(Windows)

 13

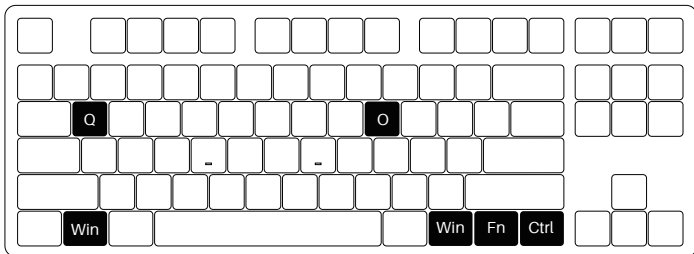

Lock Windows Key

Press Fn and left Win key

Restore Factory Settings

Hold down left Win and press right Win for 5S

Revert Ctrl into Menu (APP) key

Hold down Fn and press right Ctrl for 3S

 
Enter Windows system

Hold down Fn and press Q key for 3S

Enter Mac system

Hold down Fn and press O key for 3S

5087S RGB System Commands(Mac)

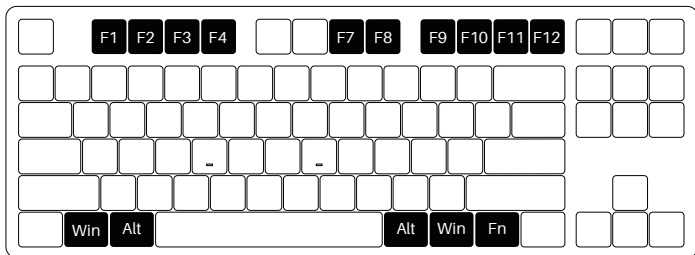

F1 Decrease display brightness

F2 Increases display brightness

F3 Open mission control

F4 Activate Siri

F7 Skip back (Audio)

F8 Pause/Play (Audio)

F9 Skip forward (audio)

F10 Mute

F11 Volume down

F12 Volume up

Left Win Option

Left Alt Command

 
Right Alt Command

Right Win Option

Fn + (F1 ~ F12)

F1 ~ F12

5087S RGB Backlight Function

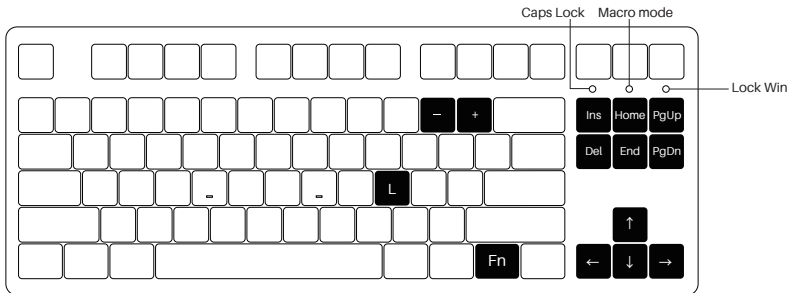


Fn+	Ins	Breathe 1 / Steady 1 / Gradient
	Home	Wave 1 / Centered 1 / Aurora 1
	PgUp	Effect H 1 / Effect F 1 / Effect B 1
	Del	= Effect D 1 2 / Effect E 1 2 / Column Gradient 1 2
	End	Effect A / Effect I 1 / Effect C 2
	PgDn	Ripples 1 / APM Color Switch 1 / Rainbow Diffusion 2
	L	Light On / Off

Fn+	"↑"	Bright
	"↓"	Dim
	"←"	= Change Animation Direction 2
	"→"	Change Color 1
	"_"	Slower Animation
	"+"	Faster Animation

1. Akko Macro V1.0 is hardware-based and works without software-driven.
2. The following keys cannot be programmed: "Esc", "Fn", "Left Win" and "Right Win".
3. Akko Macro V1.0 does not support simultaneous trigger, that is, pressing "AB" at the same time will trigger the two keys in the order of A followed by B.
4. Akko Macro V1.0 does not support customized interval time, that is, the trigger interval between key A and key B cannot be defined and will follow the system's default trigger time.

Akko Macro V1.0 Macro Setup Instruction 2

 17

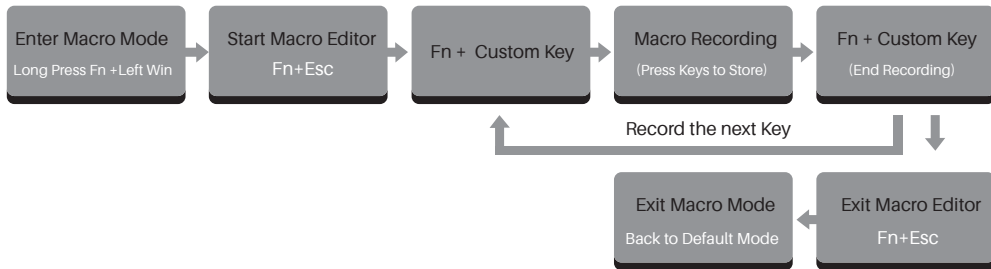

If a key has been defined, after entering the Macro editor, you can press "FN + the key" to clear its definition.

Clear Macro:

If you want to re-customize that key, press "FN + the key" again to start the new Macro recording after clearing its old definition.

Macro Recording Example: Define "A" as "AKKOGEAR"

Step 1: Press Fn + left Win for 3 seconds to enter the Macro mode.

Step 2: Press Fn + ESC to launch Macro editor.

Step 3: Press Fn + A. This means we choose key "A" to record.

Step 4: Press A, K, K, O, G, E, A, R in order as replacement definition of "A".

Step 5: Press Fn + A again to end the Macro recording of key "A".

At this point, pressing "A" in notepad will display "AKKOGEAR".

If you want to create a Macro for key "B", press Fn + B to start the Macro recording.

Step 6: Press Fn + Esc to exit Macro editor.

Under the Macro mode, you can configure the keys and Macros you set.

Step 7: Press and hold Fn + Left Win for 3 seconds to exit the Macro mode and return to the default key definition.

Method A:

Enter the Macro mode by long pressing Fn+left Win. Then all keys will turn to pre-configured definitions with locked Win key. Press Fn+Win to unlock Win key if necessary. In the Macro mode, you can use keys with customized definitions. Note, everytime you reboot or re-plugged the cable of the keyboard, the Macro mode will be turned off by default and all keys will return to default definitions until you re-enter the Macro mode.

Method B:

Under the default key definition, you can also quickly call the customized content of specific keys through "Fn+right Alt+the key that has been defined through Macro". Note that you must first press Fn and then press Alt to call the Macro.

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



扫描关注官方微信



扫描关注官方微博



[instagram.com/akkogear](https://www.instagram.com/akkogear)



[facebook.com/akkogear](https://www.facebook.com/akkogear)