



AKKO

# Sakura Jelly

Acrylic Mechanical Keyboard  
User Manual


# Menu

Technical Specifications	1
HotKeys	2
System Commands	3
Backlight Settings	4
Akko Macro V1.0 Macro Setup Instruction 1	5
Akko Macro V1.0 Macro Setup Instruction 2	6
Akko Macro V1.0 Macro Setup Instruction 3	7
Akko Macro V1.0 Calling Macros	8
Akko Warranty and Service Statement	9

# Technical Specifications

Model	Sakura Jelly
Dimensions	364 x 135 x 30mm
Weight	Approximately 0.83KG
Country of Origin	China
Type	Mechanical Keyboard
Keycap	PBT Material
Interface	Type-C To USB
Multimedia Keys	YES
N-Key Rollover	YES
Custom Keys	YES (use Akko Marco V1.0)

# HotKeys

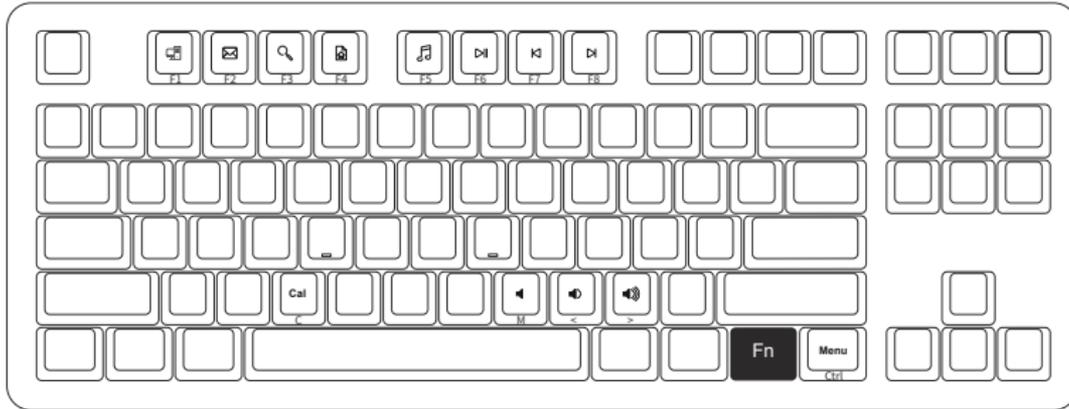

Fn+	F1	=	File Explorer
	F2	=	E-mail
	F3	=	Windows Search
	F4	=	Browser Homepage


Fn+	F5	=	Media
	F6	=	Pause/Playback
	F7	=	Previous Song
	F8	=	Next Song

Fn+	C	=	Calculator
	M	=	Mute
	<	=	Decrease Volume
	>	=	Increase Volume

Hold down FN and press right Ctrl

Revert Ctrl into Menu (APP) key

# System Commands

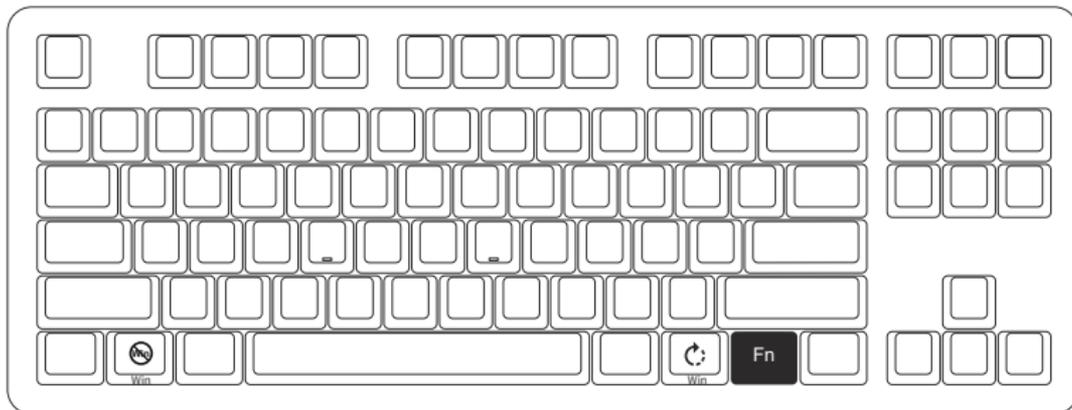


Lock Windows Key

Press Fn and left Win key

Restore Factory Settings

Hold down left Win and right Win key for 5s

# Backlight Settings

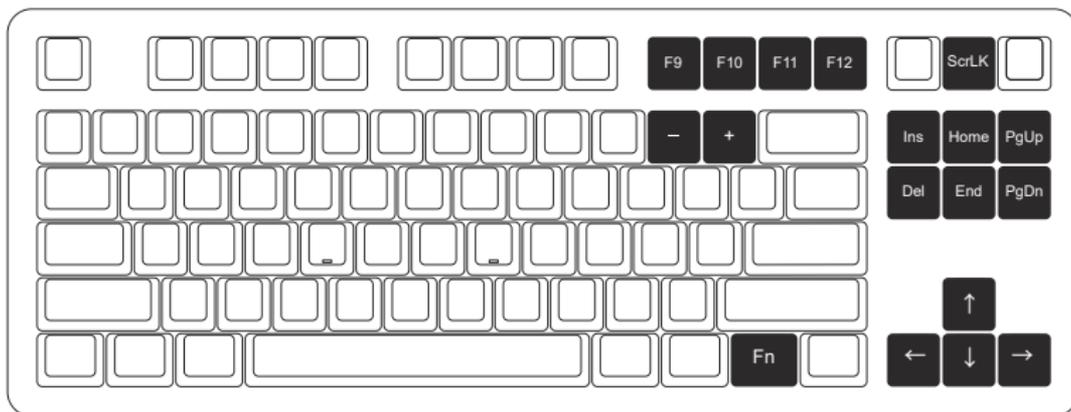


Fn+	F9	=	Acrylic Case Light Animation Faster	Fn+	Ins	=	Lighting Effect 1	Fn+	“↑”	=	Bright	The adjustments on the left is for generic lighting effects. Some lighting effects cannot be tweaked. For example, effects with constant light can only adjust brightness as they don't have animation speed and direction.
	F10		Acrylic Case Light Animation Slower		Home		Lighting Effect 2		“↓”		Dim	
	F11		Acrylic Case Light Dimmer		PgUp		Lighting Effect 3		“←”		Change the Animation Direction for Some Lighting Effects	
	F12		Acrylic Case Light Brighter		Del		Lighting Effect 4		“→”		Change the Color for Some Lighting Effects	
	ScrLK		Turn Off Backlight		End		Lighting Effect 5		“-”		Slower Animation	
				PgDn	Lighting Effect 6		“+”	Faster Animation				

# Akko Macro V1.0 Macro Setup Instruction 1

1. Akko Macro V1.0 is hardware-based and works without software-driven.
2. The following keys cannot be programmed: "Esc", "Fn", "Left Win".
3. Press and hold Fn + Win for 3 seconds to switch to the Macro mode. When the keyboard is re-connected or the system is restarted, the Macro mode will be exited. You need to switch to the Macro mode again to use programmed keys.
4. Akko Macro V1.0 does not support simultaneous trigger, that is, pressing "AB" at the same time will trigger the two keys in the order of A followed by B.
5. Akko Macro V1.0 does not support customized interval time, that is, the trigger interval between key A and key B cannot be defined and will follow the system's default trigger time.

# Akko Macro V1.0

## Macro Setup Instruction 2

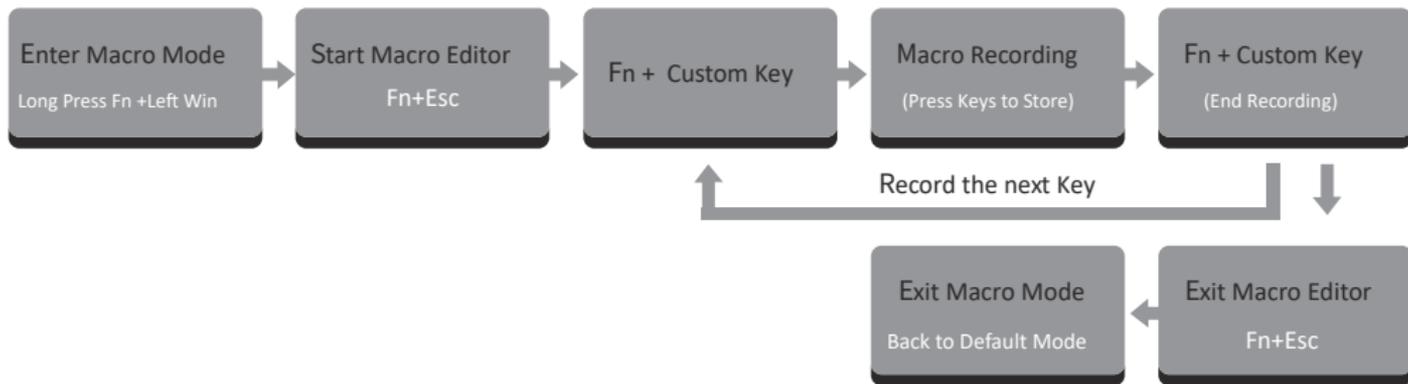

### Clear Macro:

If a key has been defined, after entering the Macro editor, you can press “FN + the key” to clear its definition.

If you want to re-customize that key, press “FN + the key” again to start the new Macro recording after clearing its old definition.

# Akko Macro V1.0

## Macro Setup Instruction 3

### Macro Recording Example: Define “A” as “AKKOGEAR”

Step 1: Press Fn + right Win for 3 seconds to enter the Macro mode.

Step 2: Press Fn + ESC to launch Macro editor.

Step 3: Press Fn + A. This means we choose key “A” to record.

Step 4: Press A, K, K, O, G, E, A, R in order as replacement definition of “A”.

Step 5: Press Fn + A again to end the Macro recording of key “A”.

At this point, pressing “A” in notepad will display “AKKOGEAR”.

If you want to create a Macro for key “B”, press Fn + B to start the Macro recording.

Step 6: Press Fn + Esc to exit Macro editor.

Under the Macro mode, you can configure the keys and Macros you set.

Step 7: Press and hold Fn + Left Win for 3 seconds to exit the Macro mode and return to the default key definition.

# Akko Macro V1.0 Calling Macros

## Method A:

Enter the Macro mode by long pressing Fn+left Win. Then all keys will turn to pre-configured definitions with locked Win key. Press Fn+Win to unlock Win key if necessary. In the Macro mode, you can use keys with customized definitions.

Note, everytime you reboot or re-plugged the cable of the keyboard, the Macro mode will be turned off by default and all keys will return to default definitions until you re-enter the Macro mode.

## Method B:

Under the default key definition, you can also quickly call the customized content of specific keys through “Fn+right Alt+the key that has been defined through Macro” . Note that you must first press Fn and then press Alt to call the Macro.

# Akko Warranty and Service Statement

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

## Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



[www.akkogear.com](http://www.akkogear.com)



Scan to follow official  
WeChat account



Scan to follow official  
Weibo account



[instagram.com/akko\\_official](https://www.instagram.com/akko_official)



[facebook.com/akkogear](https://www.facebook.com/akkogear)